




0670-2 POWER DISTRIBUTION

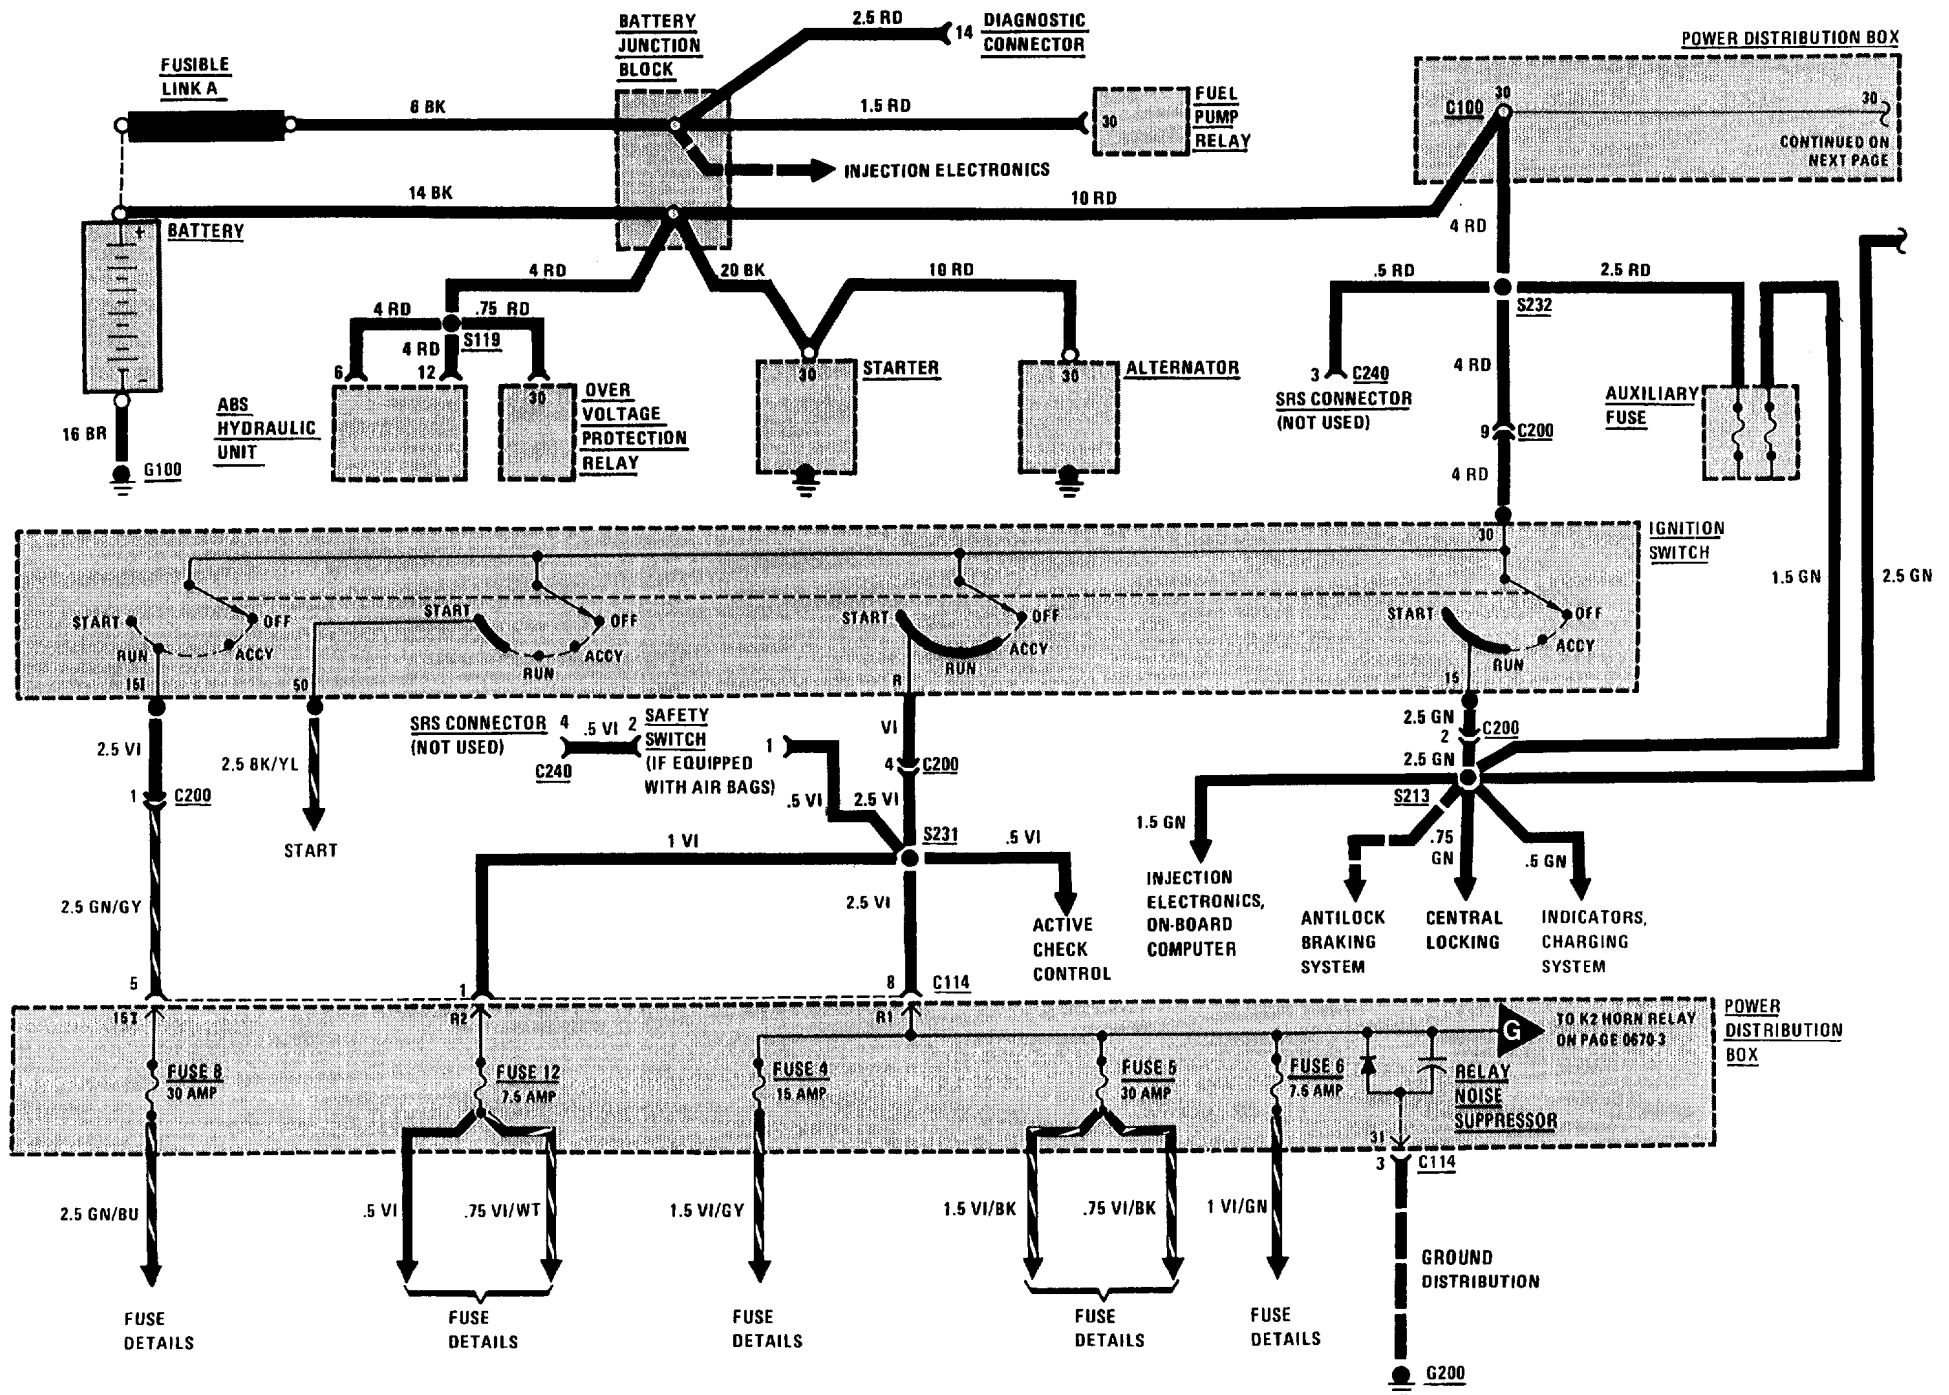


POWER DISTRIBUTION BOX

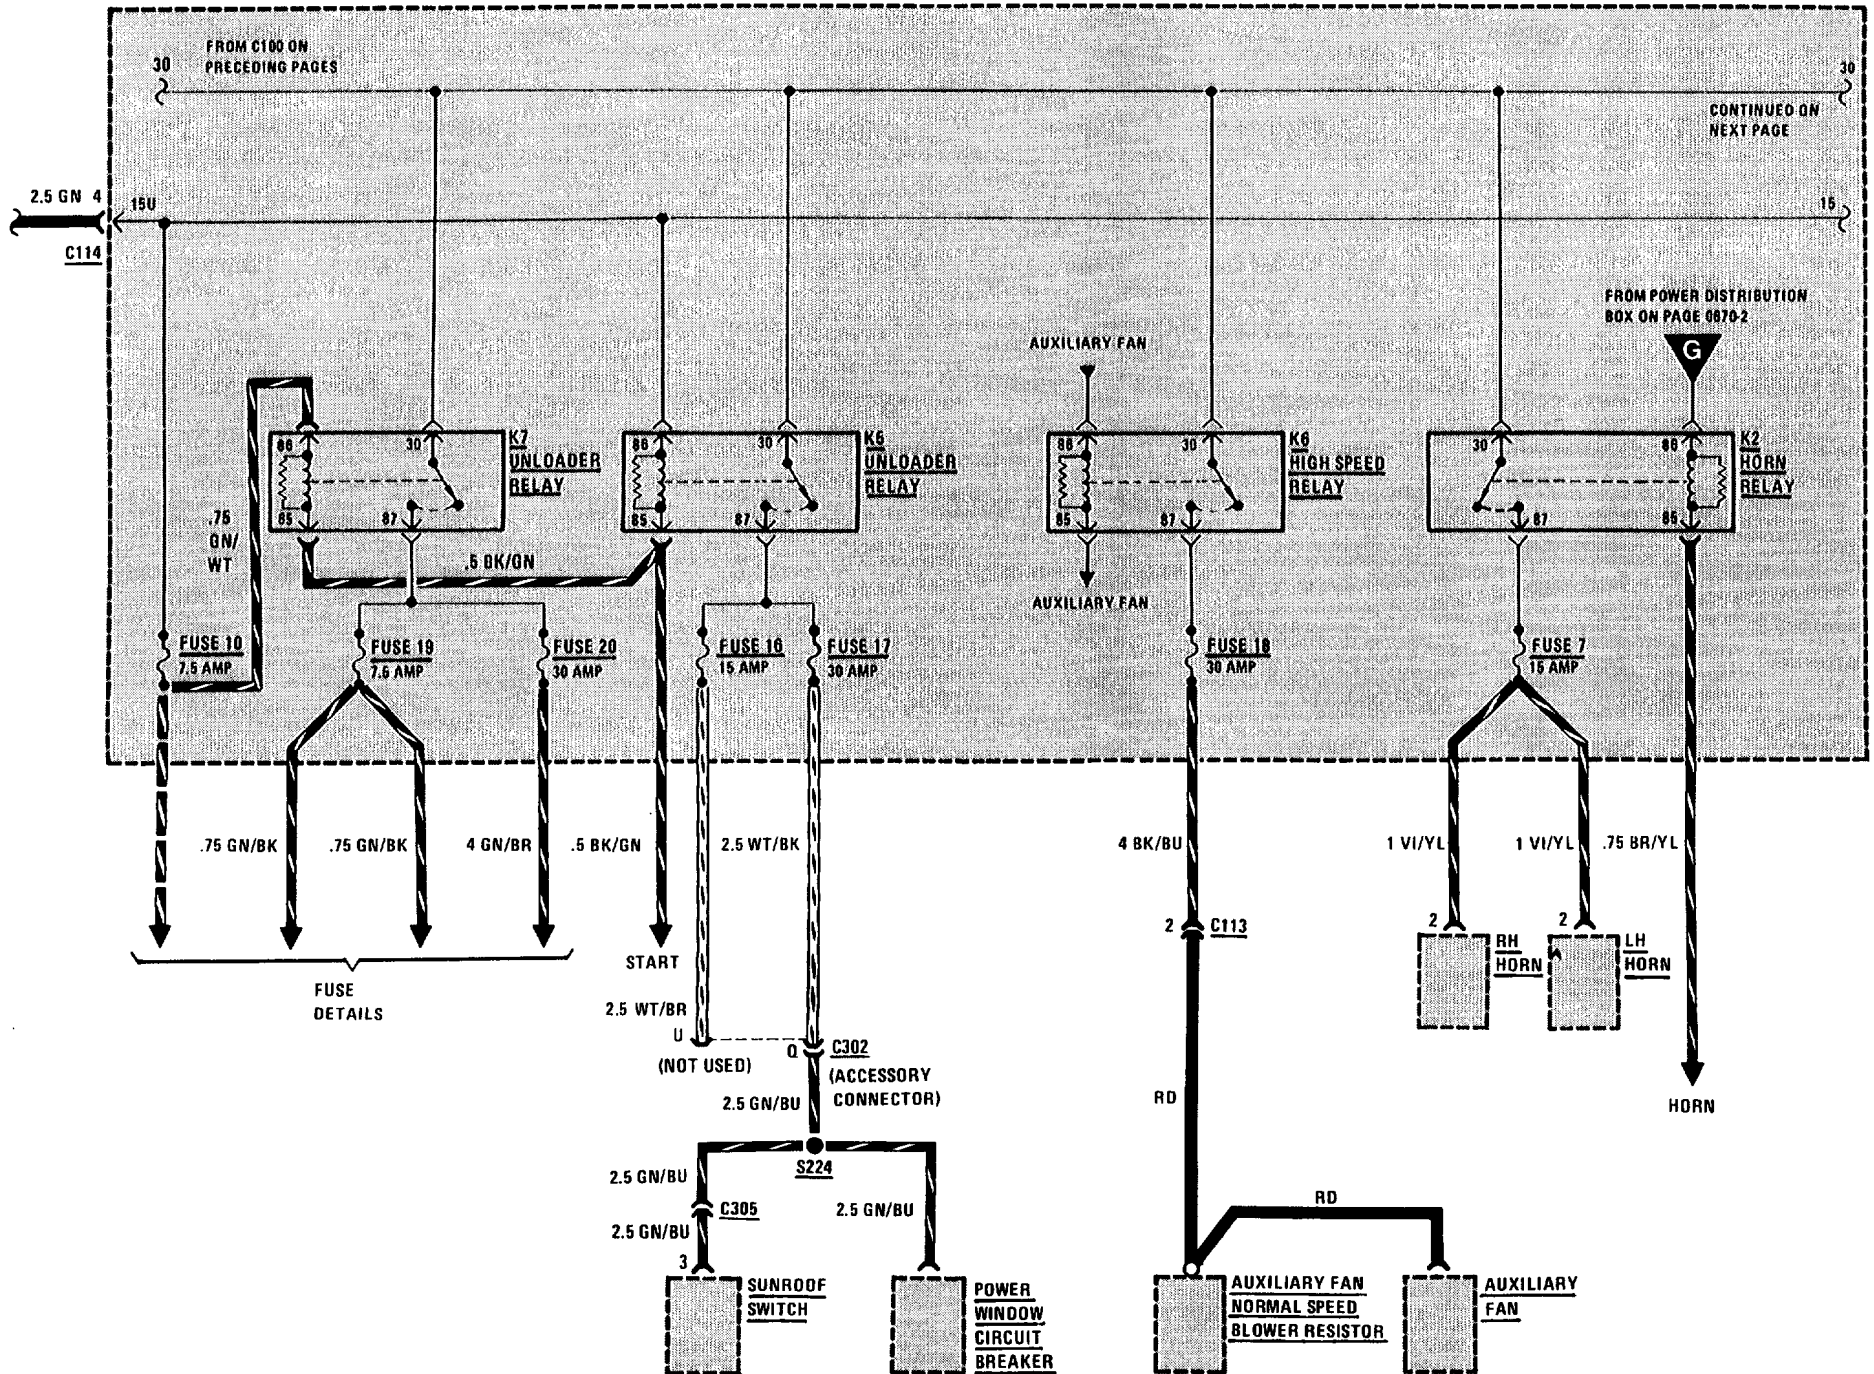

0670-4 POWER DISTRIBUTION

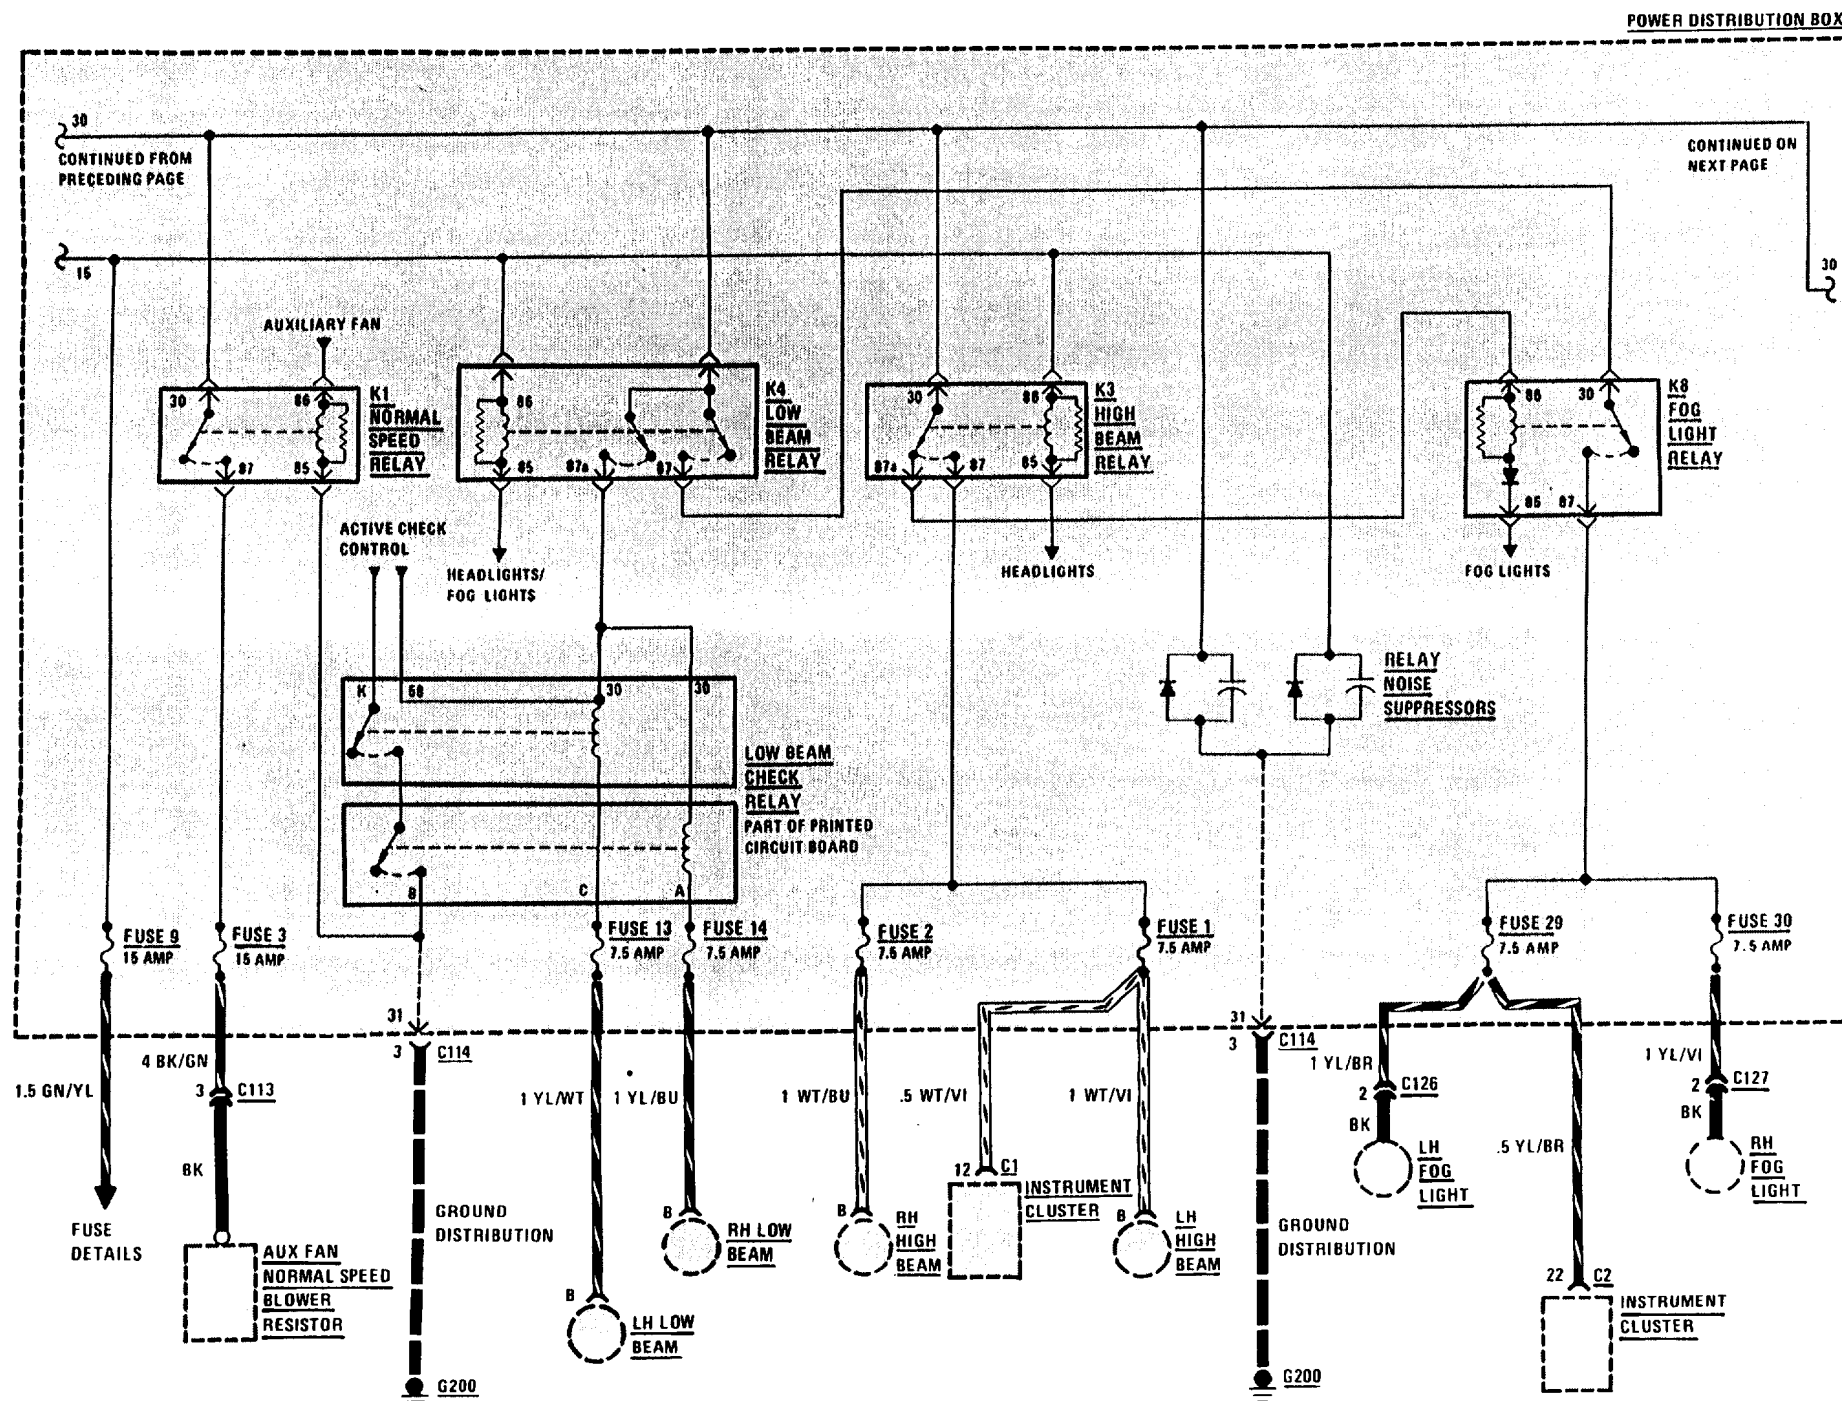


POWER
DISTRIBUTION
BOX

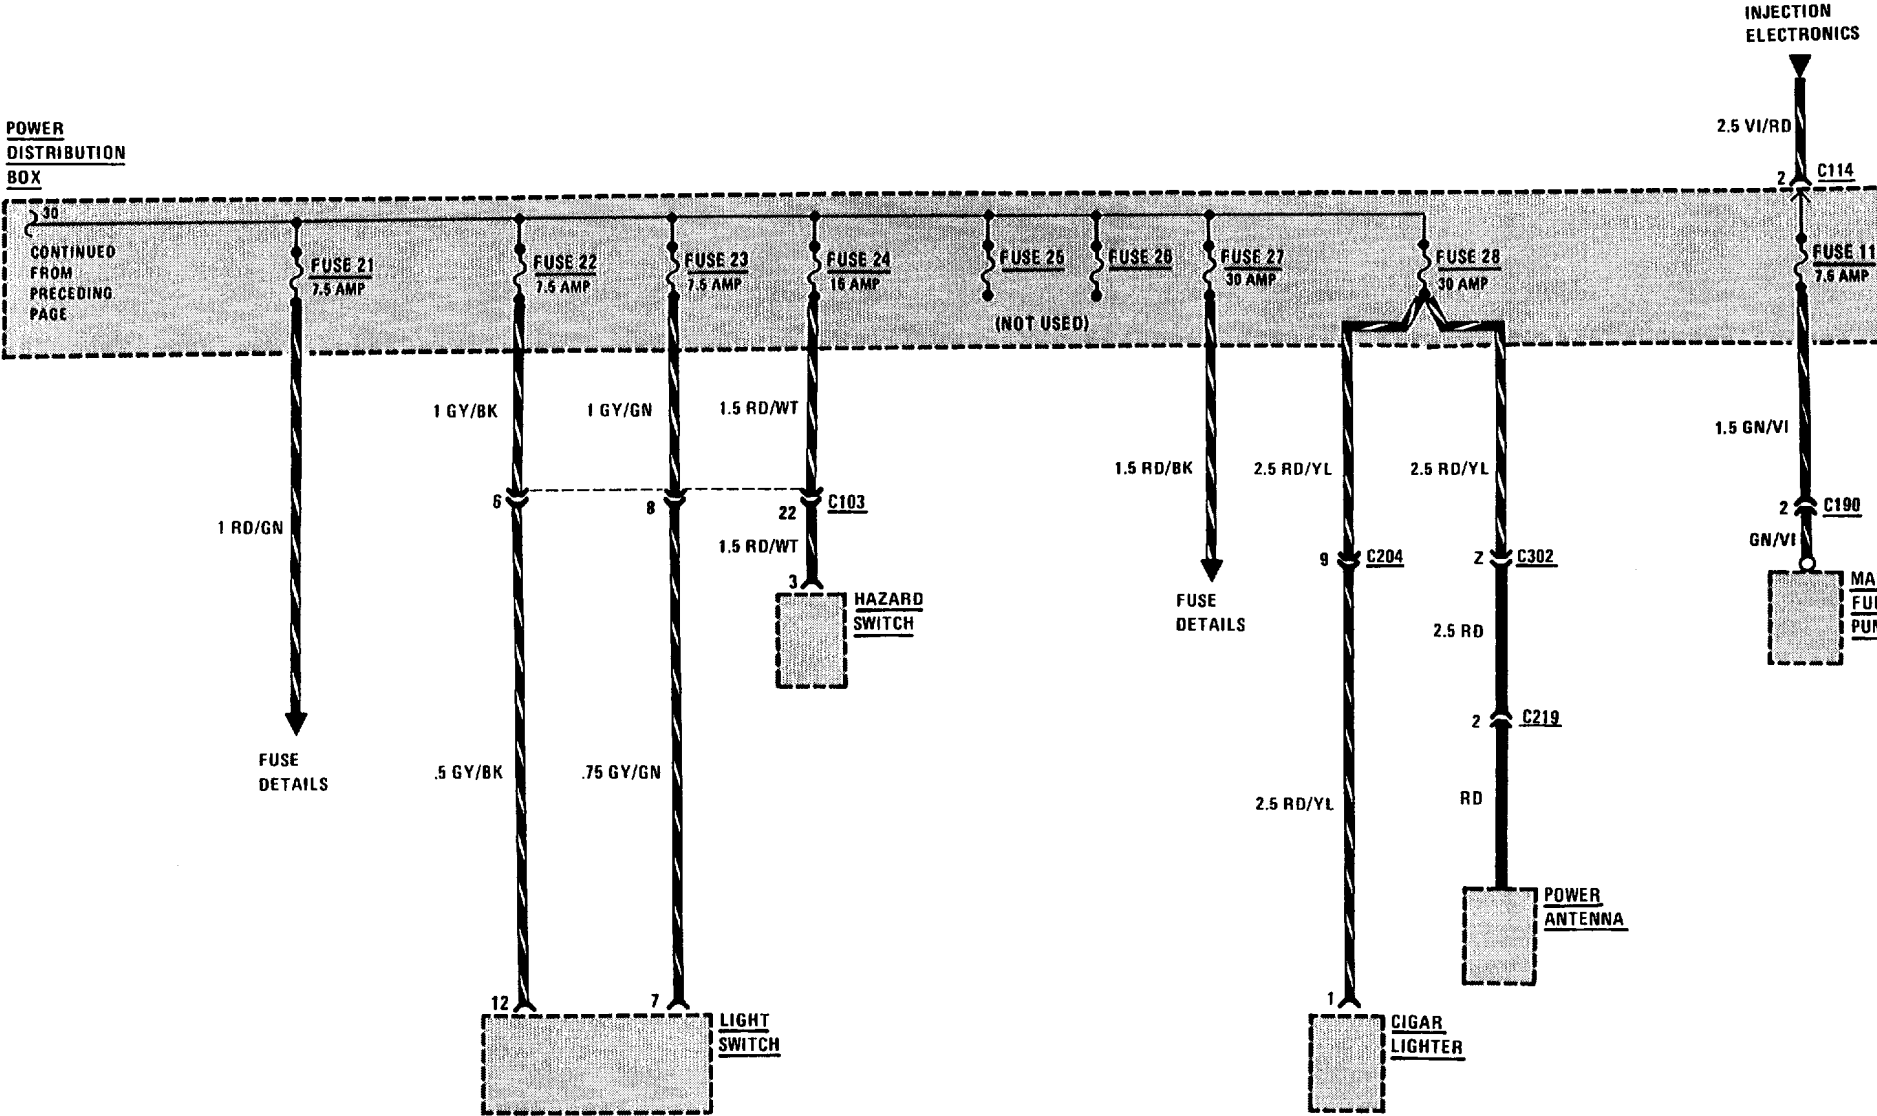


0670-6 POWER DISTRIBUTION

FUSE DETAILS: FUSES 4, 5, AND 6

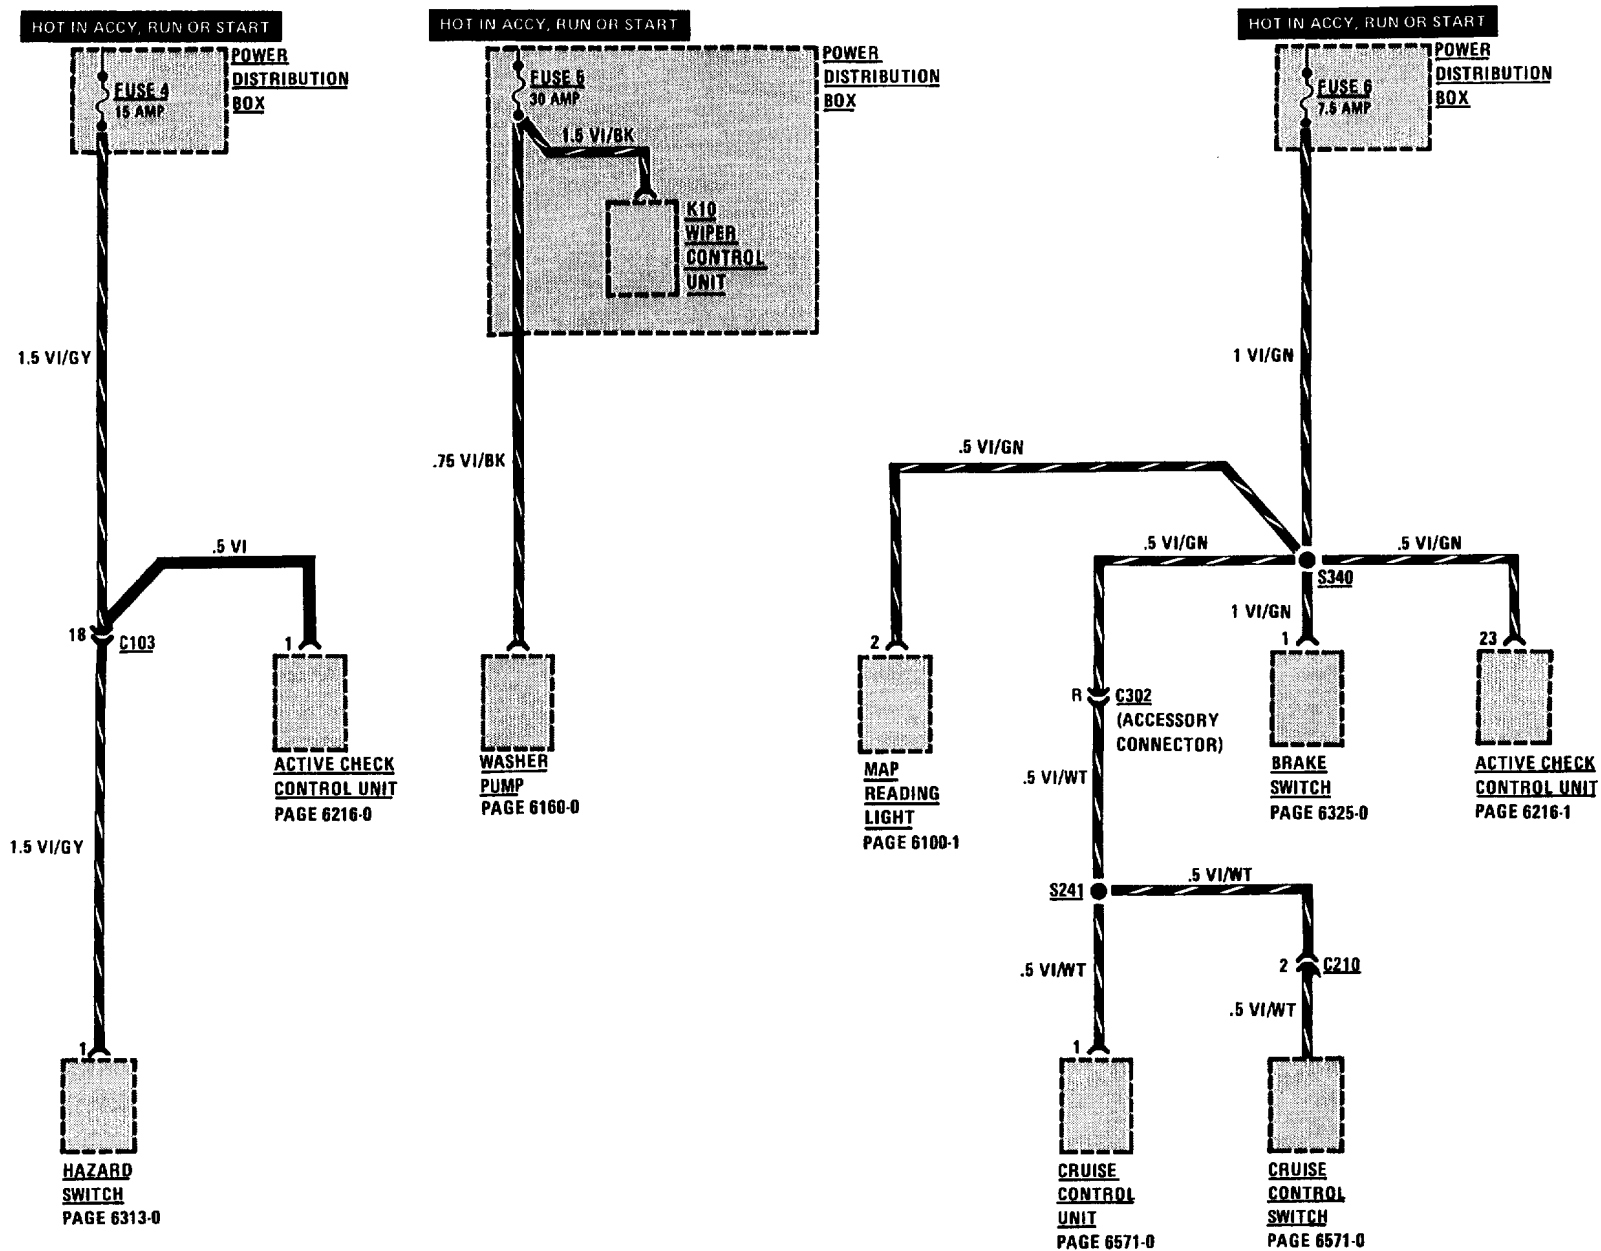


FUSE DETAILS: FUSES 8, 12 AND 19

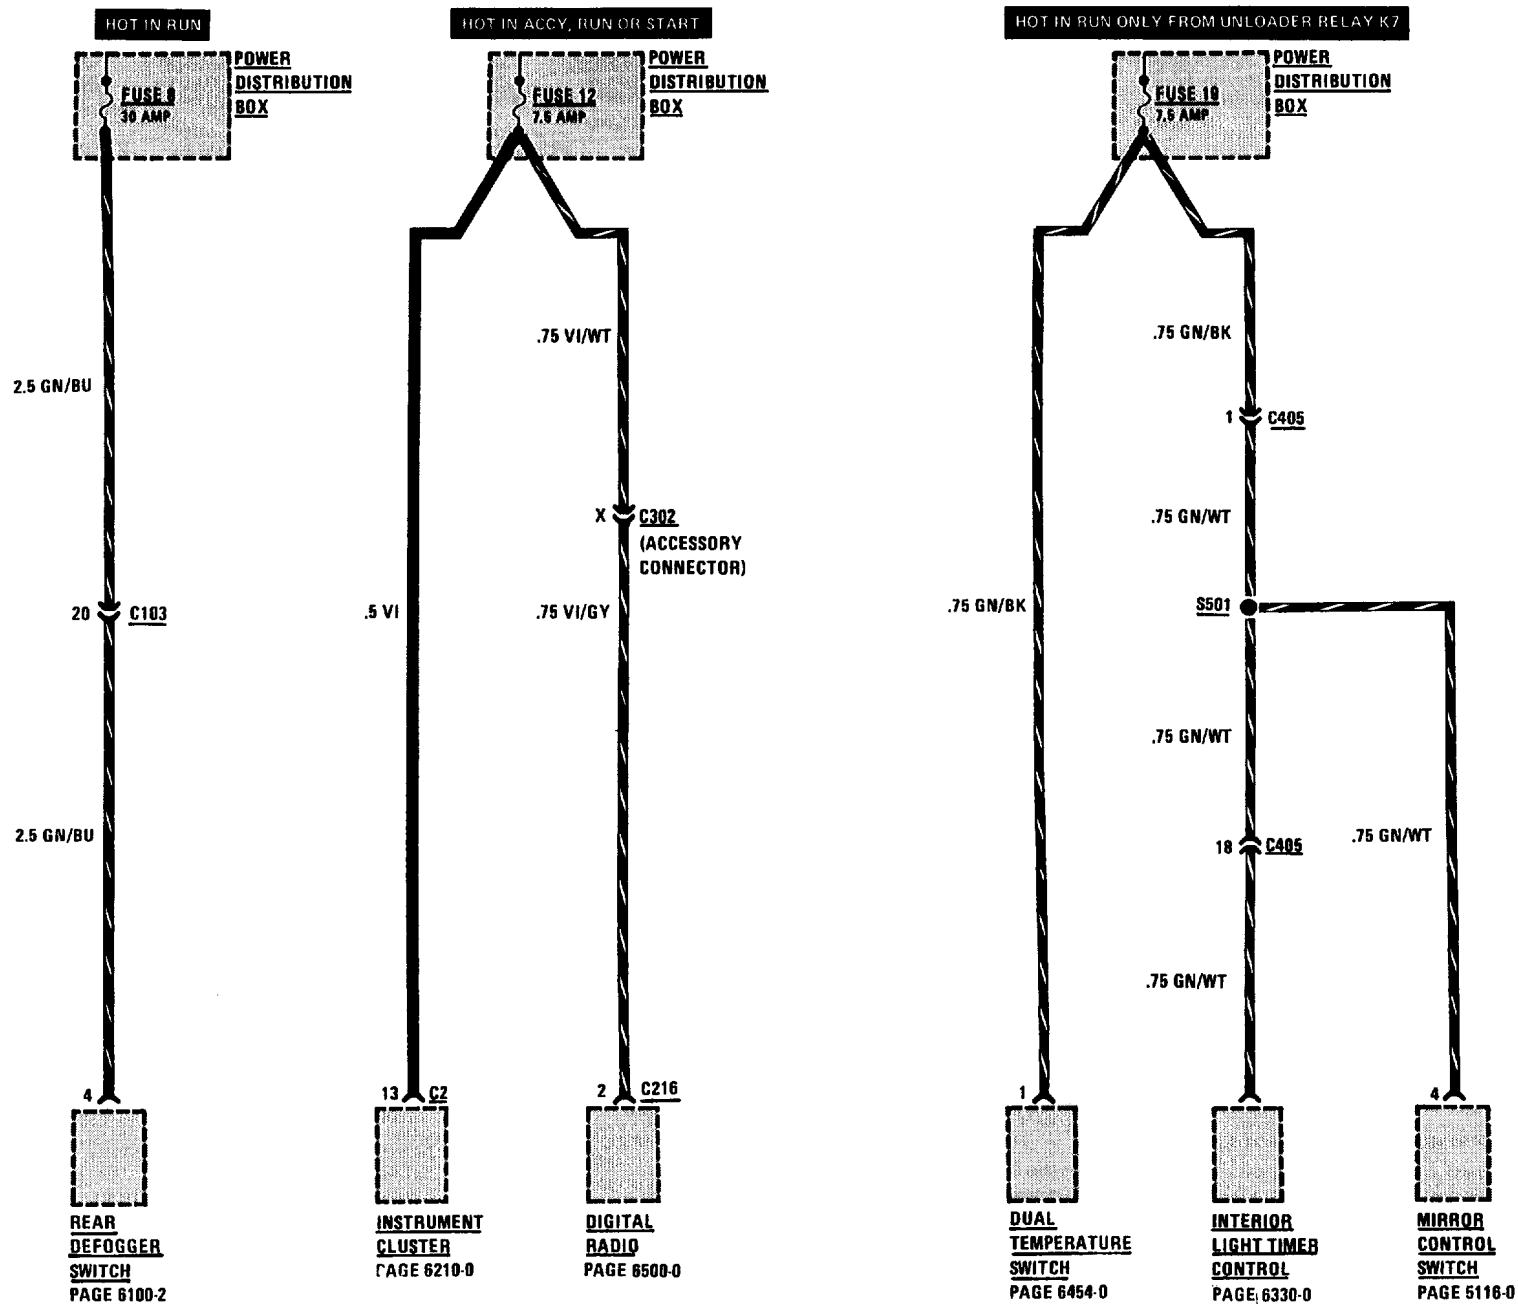

0670-8 POWER DISTRIBUTION

FUSE DETAILS: FUSE 10

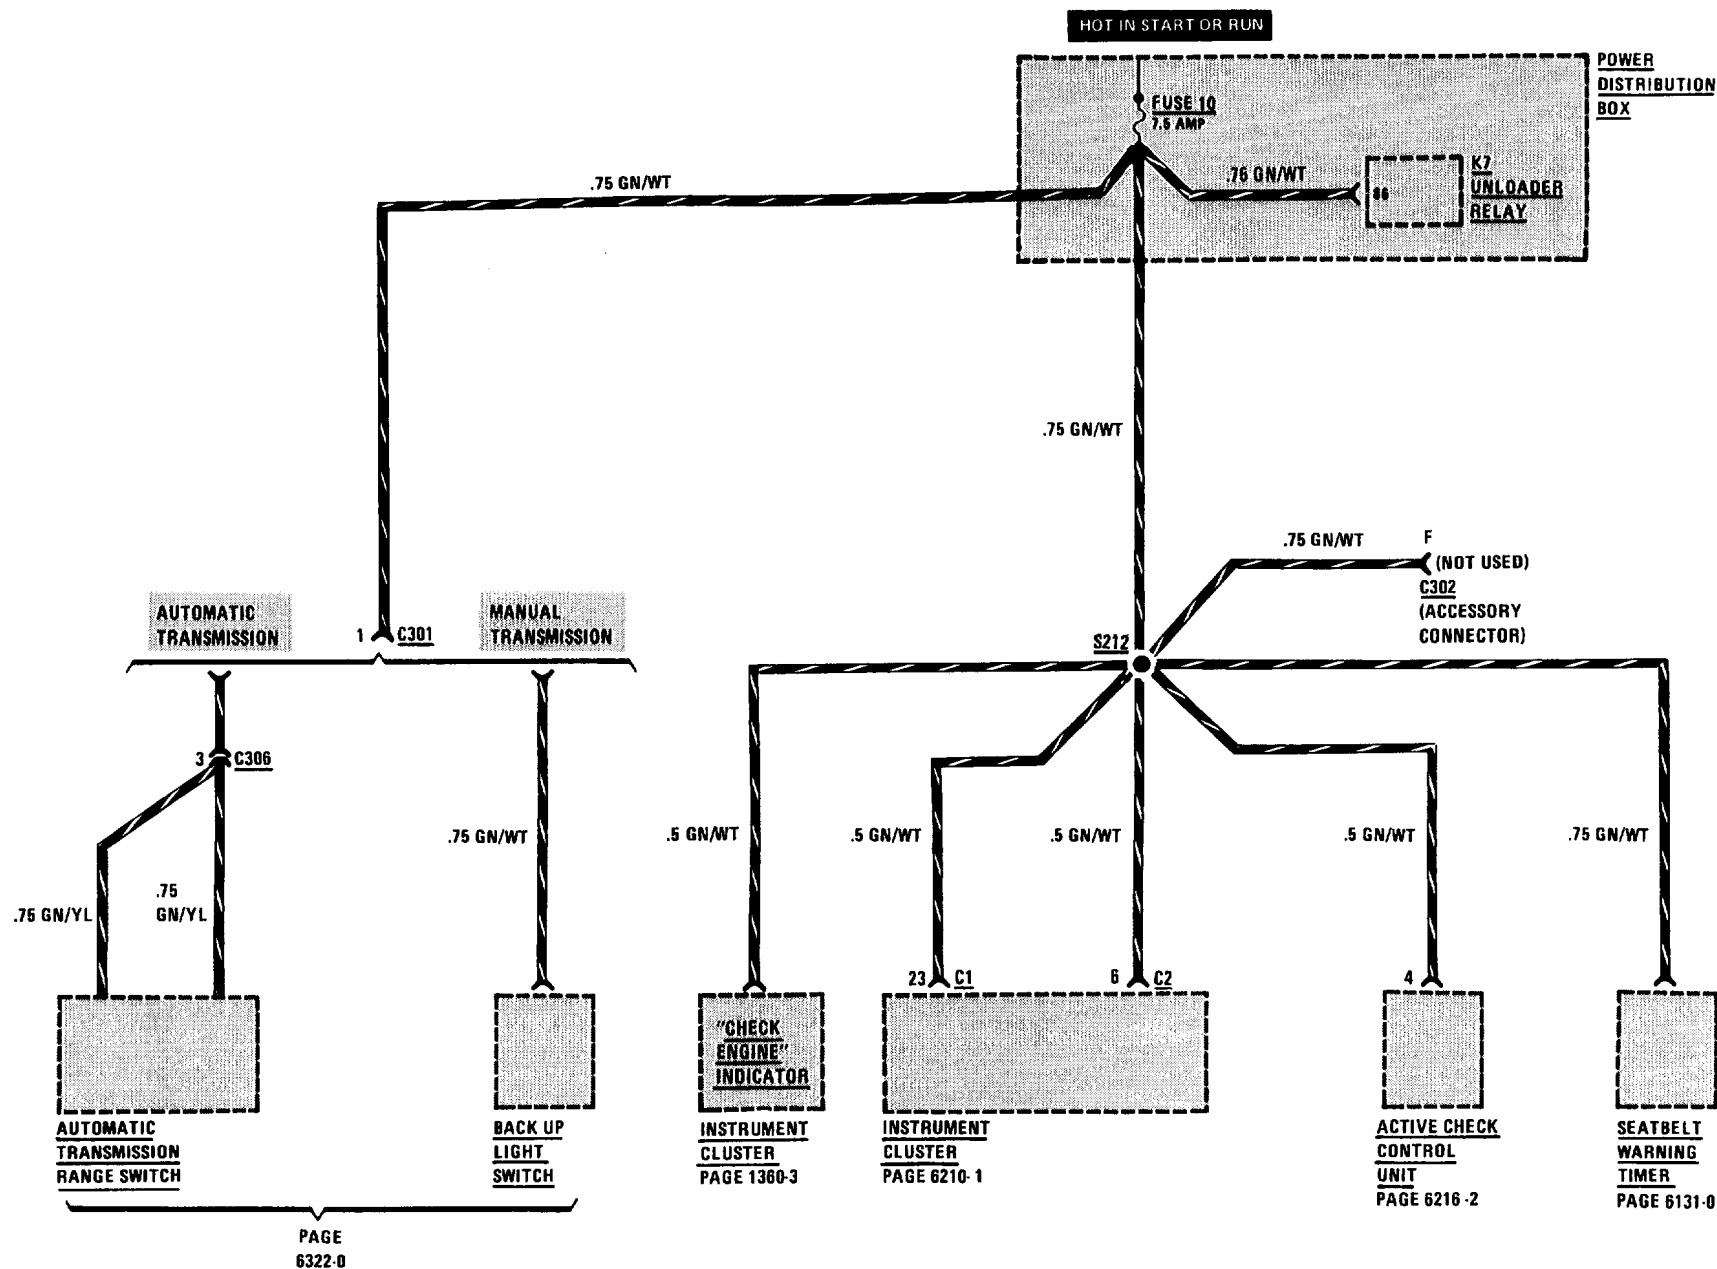

FUSE DETAILS: FUSE 20

