


6413-0 A/C BLOWER CONTROLS

HEATING AND AIR CONDITIONING (BLOWER CONTROLS)

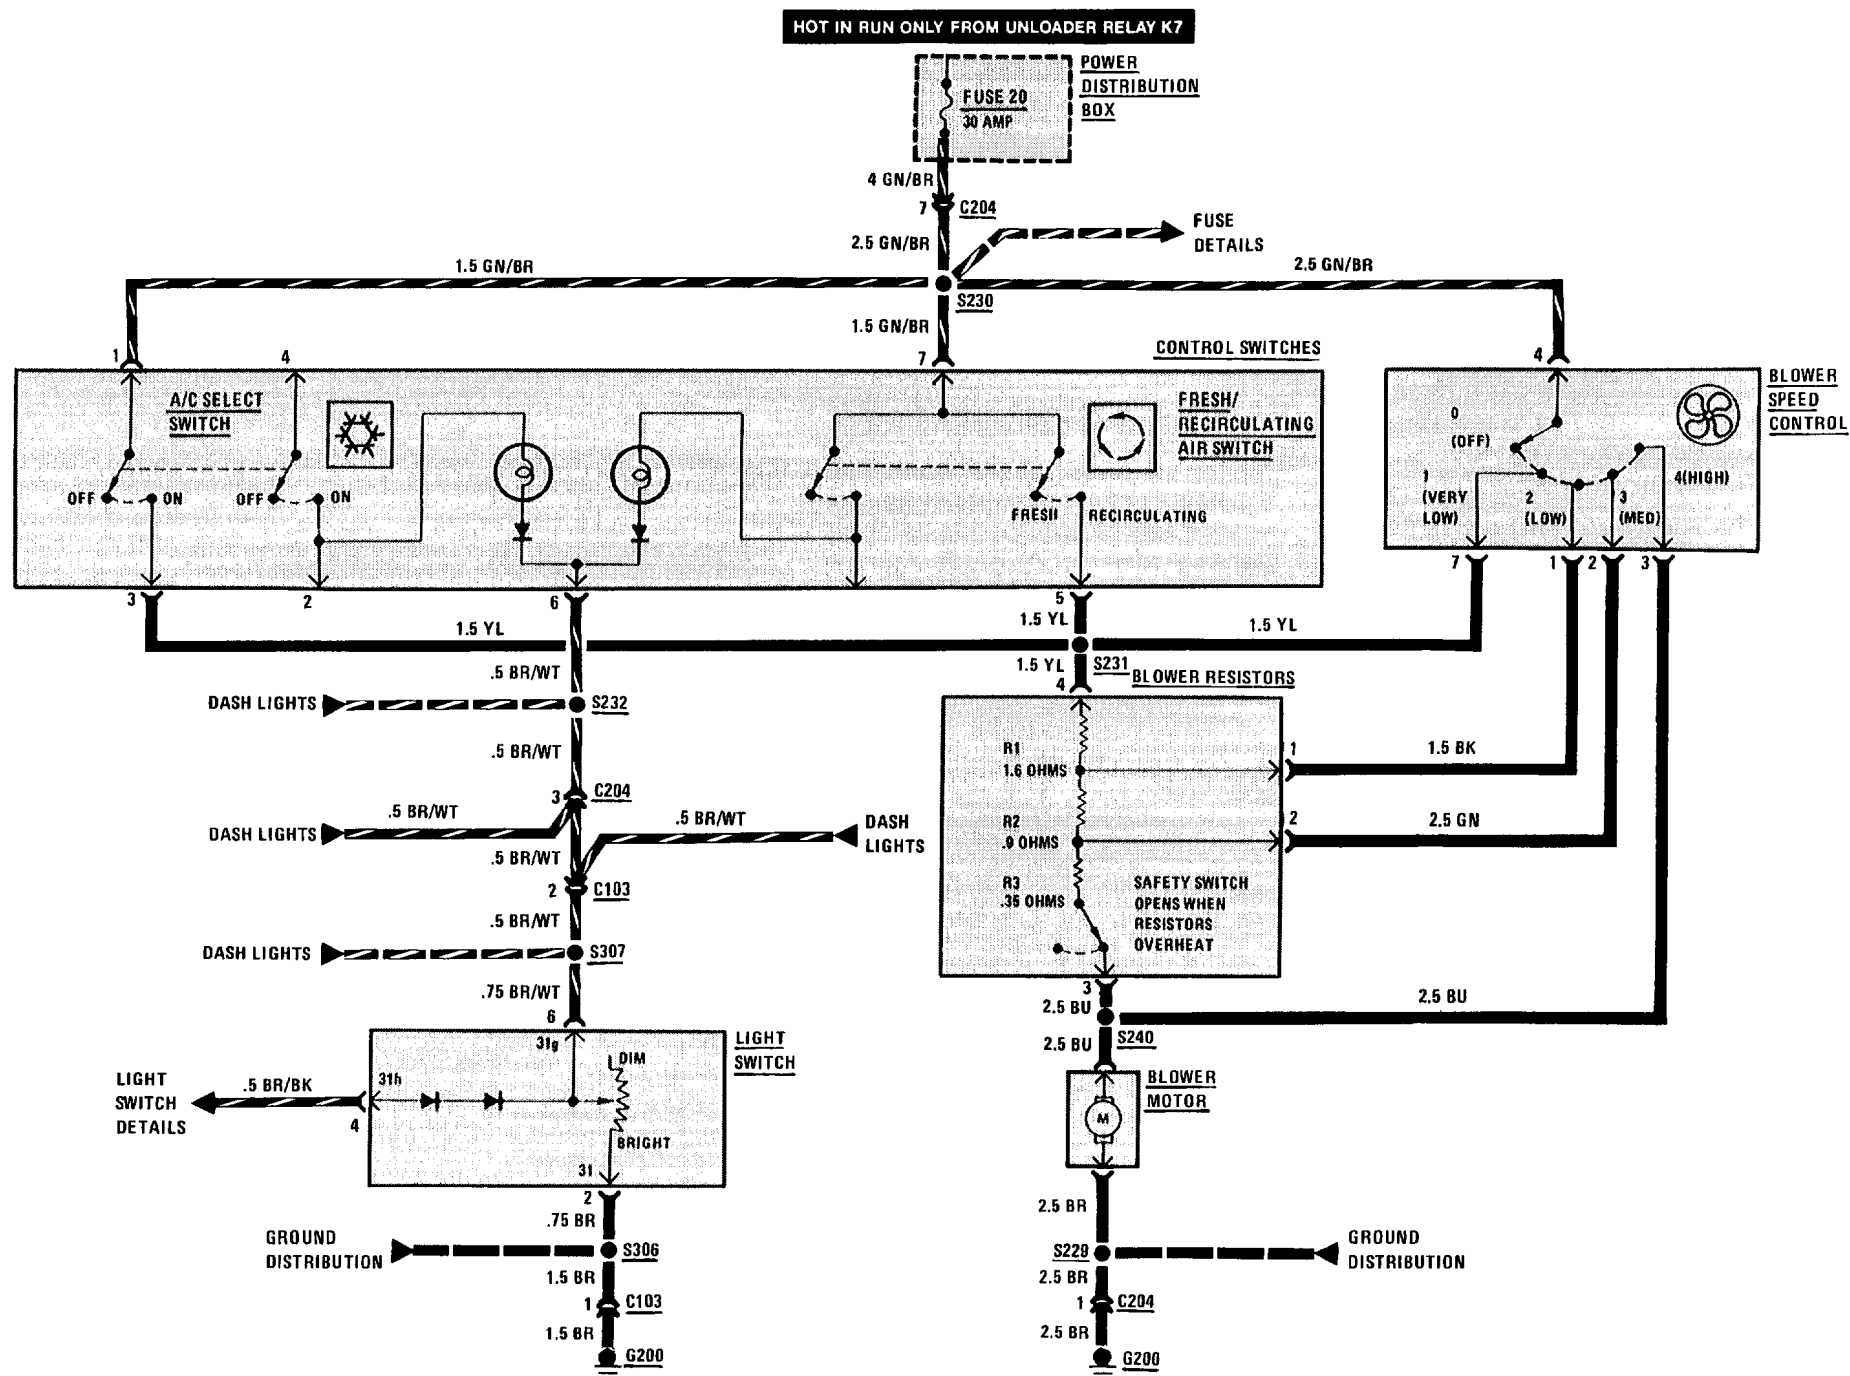

CIRCUIT OPERATION

With the Ignition Switch in RUN, battery voltage is applied to the Control Switches and the Blower Speed Control through the GN/BR wires. If either the A/C Select Switch or the Fresh/Recirculating Air Switch are ON or the Blower Speed Control is in position 1, battery voltage is applied through the YL wire to the Blower Resistors and the Blower Motor.

The Blower Motor is a variable speed motor which runs at a speed proportional to the voltage applied to it. With all of the Blower Resistors in the circuit, the voltage applied to the motor is reduced so the motor runs at a low speed.

As the Blower Speed Control is moved through positions 2 and 3, some of the resistors are bypassed, allowing more voltage to be applied to the Blower Motor, which then runs at a higher speed. When the Blower Speed Control is moved to position 4, battery voltage is applied directly to the Blower Motor, which then runs at maximum speed.

The Blower Resistors dissipate heat because of the current flowing through them. They are cooled by the air flow from the blower. If there is insufficient air flow to cool the resistors, the safety switch will open, shutting the Blower Motor off until the resistors have cooled.

TROUBLESHOOTING HINTS

- Try the following checks before doing the System Diagnosis.
- 1. Check Fuse 20 by visual inspection.
- 2. If Blower will run in high only, check the Blower Resistors' Safety Switch for an open.
- Go to Heating and Air Conditioning (6410-0) System Check for a guide to normal operation.
- Go to System Diagnosis for diagnostic tests.

SYSTEM DIAGNOSIS

- Do the tests listed for your symptom in the Symptom Table below.
- Tests follow the Symptom Table.

SYMPTOM TABLE

SYMPTOM	DO TEST
Blower Motor does not run in any speed setting.	B
Blower runs only in HIGH (does not run in any other speed setting).	B
Blower does not run in some modes.	A
Blower does not run with A/C ON or in Recirculating mode.	A
A/C Select Switch or Fresh/Recirculating Air Switch does not light.	A

A: CONTROL SWITCH VOLTAGE TEST

Measure: VOLTAGE At: CONTROL SWITCHES CONNECTOR (Disconnected) Conditions: <ul style="list-style-type: none"> • Ignition Switch: RUN • Blower Speed Control: OFF 		
Measure Between	Correct Voltage	For Diagnosis
1 (GN/BR) & Ground	Battery	See 1
1 (GN/BR) & 3 (YL)	Battery	See 2 & 4
7 (GN/BR) & Ground	Battery	See 1
7 (GN/BR) & 5 (YL)	Battery	See 2 & 4
7 (GN/BR) & 6 (BR/WT)	Battery	See 3
<ul style="list-style-type: none"> • If all voltages are correct, do Test B. 1. Check the GN/BR wire for an open. 2. Check the YL wire for an open. 3. Check the BR/WT wire for an open. 4. If voltage is not present between the GN/BR wire and both the YL wires (terminals 3 and 5), do Test B. 		

B: BLOWER SPEED CONTROL TEST

Measure: VOLTAGE

AT: BLOWER SPEED CONTROL
CONNECTOR (Disconnected)

Conditions:

- Ignition Switch: RUN
- A/C Select Switch: ON (Depressed)
- Fresh/Recirculating Air Switch: FRESH (Not Depressed)

Measure Between	Correct Voltage	For Diagnosis
4 (GN/BR) & Ground	Battery	See 1
7 (YL) & Ground	Battery	See 2
• A/C Select Switch: OFF (Not Depressed)		
7 (YL) & Ground	0 Volts	See 3
4 (GN/BR) & 7 (YL)	Battery	See 4, 8, 9, & 10
4 (GN/BR) & 1 (BK)	Battery	See 5, 8, 9, & 10
4 (GN/BR) & 2 (GN)	Battery	See 6, 8, 9, & 10
4 (GN/BR) & 3 (BU)	Battery	See 7 & 10
<ul style="list-style-type: none"> • If all voltages are correct, replace the Blower Motor. 		
1. Check the GN/BR wire for an open.		
2. Check the YL wire for an open between Blower Speed Control and splice S231.		
3. Check the YL wire for a wire to wire short to voltage.		
4. Check the YL wire for an open between splice S231 and the Blower Resistors.		

(Continued from previous column)

5. Check the BK wire for an open.
6. Check the GN wire for an open.
7. Check the BU wire for an open.
8. If voltage is not present at the YL wire, but is present at the GN wire or BK wire, replace the Blower Resistors.
9. If voltage is not present at the YL, BK or GN wires, check for an open Blower Resistors' Safety Switch.
10. If voltage is not present at the YL, BK, GN and BU wires, do Test C.

C: BLOWER MOTOR TEST

Measure: VOLTAGE

At: BLOWER MOTOR CONNECTOR
(Disconnected)

Conditions:

- Ignition Switch: RUN
- A/C Select Switch: ON
- Blower Speed Control: HIGH

Measure Between	Correct Voltage	For Diagnosis
BU & Ground	Battery	See 1
BU & BR	Battery	See 2
<ul style="list-style-type: none"> • If both voltages are correct, replace the Blower Motor. 		
1. Check the BU wire for an open. If wire is good, recheck Test B.		
2. Check the BR wire to ground G200 for an open.		

(Continued in next column)